

SECTION 1: ASSEMBLY

STEP 1

Enclosed are four bags of rocks and one factory installed 10' propane-rated hose with attached regulator.

STEP 2

Remove plastic bags containing the rocks.

STEP 3

Open the bag containing the smaller rocks, labelled conveniently for you "Put Me In First" and arrange in burner area.

STEP 4

Next, open the bag of medium sized rocks, labelled conveniently for you "Put Me In Second" and place over small rocks.

STEP 5

Finally, open the bag of larger rocks, labelled conveniently for you "Put Me In Last" and arrange over top of the medium rocks.

STEP 6

The fourth bags of rocks are included as spares and are labelled "Spare Rocks".

NOTE TO USER:

Before igniting the unit for the first time, follow steps one through 5 in the below Ignition section.

Mix a solution of liquid soap and water in a spray bottle, and apply to the gas fittings you have just connected.

If parts of the fitting begin to produce bubbles, spray liquid, or if you smell liquid propane gas, immediately close the valve on the tank, and leave the unit for at least an hour undisturbed to allow excess gas to escape.

After an hour, disconnect the hose and take the unit to a certified propane technician for consultation.



Our preferred configuration is pictured here.

Never handle rocks which have not been allowed to cool from exposure to flame. Never attempt to rearrange rocks while unit is ignited.

(Note: Rocks are not to exceed a maximum weight of 5 kgs or 11 lbs.)

SECTION 2: IGNITION

STEP 1

Ensure that unit valve dial is in the "OFF" position by pushing and turning clockwise until the dial stops.



STEP 2

Securely attach regulator (large end of hose) to your propane cylinder.



SECTION 2: IGNITION CONTINUED

STEP 3

Extend hose to full length and ensure that the propane tank is as far as safely possible from the Fire Bowl.

STEP 4

Slowly* turn cylinder valve to the open position.

***NOTE:** Opening the valve too quickly may activate the excess-flow valve in your propane cylinder, decreasing gas flow dramatically. In this case, shut valve off and re-open very slowly.

STEP 5

Using a lighter or match, ignite lighter and hold flame slightly above the burner, then open the valve on the appliance slowly by turning (counter-clockwise) until the unit ignites.



STEP 6

Set dial to desired flame height.



WARNING: Ensure that no parts of your body, clothing, or any other combustible material are above the burner before, during and after ignition.

SECTION 3: PERIODIC INSPECTION OF BURNER FLAMES



Upon igniting the appliance, visually verify that the burner is indeed burning as demonstrated in the image below. The presence of flames will confirm that the burner is burning. Periodically check that the burner flame is present during operation by visually inspecting the burner to ensure the presence of flames.



If there are no flames present, as demonstrated in the image below, the appliance is likely not burning. If this is the case, IMMEDIATELY turn the valve to the "off" position if it is not already and repeat the ignition procedure as outlined in Section 2.



Owner's Manual

SECTION 4: EXTINGUISHING THE APPLIANCE

STEP 1

Turn cylinder valve to the "Closed" position.

STEP 2

Turn appliance valve to the "Off" position by pushing and turning knob clockwise.

STEP 3

Allow unit to cool for at least five (5) minutes before relighting.

SECTION 5: FIREBOWL MAINTENANCE

Your Outland Firebowl™ requires periodic maintenance to keep it in good running order. Follow the steps below to ensure your appliance will provide you with the best possible performance:

- 1 Keep your Firebowl out of the rain and store it in a dry place.
- 2 This device has been engineered to provide the maximum amount of heat and comfort. If you experience any signs of your propane cylinder 'freezing off' or start to experience lower flames than usual, please simply turn the burner control setting to low for 5–10 minutes, or replace the cylinder with a full one.
- 3 Ensure that you clean the bowl of your Outland Firebowl™ after every use to keep it looking GREAT. Simply wiping the outer edge of the Firebowl with a damp paper towel or cloth to remove any combustion particulates.

NOTES:

- Expected burn time; the anticipated burn time for your Outland Firebowl™ using a full 20 lb (9kg) propane cylinder is between 7 and 11 hours depending on where the flame height is set.
- FMI Brands Inc. recommends that you ignite this unit only when safely placed on a non-combustible surface as pictured above.
- This is NOT a toy. Children should be supervised at all times when using this unit without exception.
- Do not place any objects other than supplied rocks inside the burner component of the Fire Bowl.
- Do not add wood or any other materials to the fire. It is designed to safely combust propane only.
- Do not connect to a remote gas supply.
- Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.
- Do not leave this appliance in the rain.
- Replacement rocks can be purchased at www.outlandfirebowl.com or by calling 888-514-1663.

REPLACEMENT PARTS LIST:

Part	Price	Quantity	Cost
Burner Assembly	\$14.95		
Fire Bowl	\$29.95		
Floor Stand	\$29.95		
Regulator and Hose	\$24.95		
Rock Set (3 Bags)	\$14.95		
Switch Cover	\$14.95		

Part	Price	Quantity	Cost
Valve	\$9.95		
Valve Knob	\$8.95		
Tin Base Plate	\$5.95		
Owner's Manual	\$4.95		
			Subtotal

Subtotal: _____ + Handling: \$10.00 + HST/GST (if applicable) _____ = TOTAL CHARGE: _____

- All prices are in Canadian Dollars (CAD).
- Please add \$10.00 per order for handling.
- All shipments sent postage collect.
- Canadian residents please add applicable HST/GST.

Replacement part orders can be sent by mail to the address on the cover of this booklet, or faxed to **(888) 797-9931**.

Should you have any questions or comments regarding this appliance, please do not hesitate to contact FMI Brands Inc. at **(888) 514-1663** or E-Mail to sales@fmibrands.com.



Manuel du Propriétaire

Créez l'ambiance parfaite



FMI BRANDS INC.
 309-19133 26th Avenue | Surrey, C-B Canada V3S 3V7 | Sans Frais 1-888-514-1663 | Télécopieur 1-888-797-9931



**OUTLAND
FIRE BOWL**

Create the perfect ambiance

Safety Manual



Model number FMPPC2 - Tested by CSA International

! DANGER:

If you smell gas:

- 1 Shut off gas to the appliance.
- 2 Extinguish any open flame.
- 3 If odour continues, keep away from the appliance and immediately call your gas supplier or fire department.

! WARNING:

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

! WARNING:

For outdoor use only.

! DANGER



CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odour.

Using it in an enclosed space can kill you.

Never use this appliance in an enclosed space such as a camper, tent, car or home.



FMI BRANDS INC.

309-19133 26th Avenue | Surrey, B.C. Canada V3S 3V7 | Toll Free 1-888-514-1663 | Fax 1-888-797-9931



! WARNING:

Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

! WARNING:

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life. Installation and service must be performed by a qualified installer, service agency or the gas supplier.

LP SAFETY:

- Do not store a spare LP-gas cylinder under or near this appliance.
- Never fill the cylinder beyond 80 percent full.
- If the information in "(a)" and "(b)" is not followed exactly, a fire causing death or serious injury may occur.

Do not use this appliance under overhead combustible surfaces.

MINIMUM CLEARANCES:

- Bottom:** Non-Combustible Surface
- Top:** 80 inches
- Sides:** 36 inches
- For Installation on (or over) non-combustible floors only

Max. Input: 58,000 BTU (17.0kW)
Max Gas Supply Pressure: 250 PSI

This appliance shall be used only outdoors in a well-ventilated space and shall not be used in a building, garage or any other enclosed area.

If this appliance is not in use, the gas must be turned off at the supply cylinder.

Indoor storage of this appliance is permissible only if the cylinder is disconnected and removed from the appliance.

Cylinders must be stored outdoors in a well-ventilated area out of the reach of children.

Disconnected cylinders must have threaded valve plugs tightly installed and must not be stored in a building, garage or any other enclosed area.

The gas pressure regulator provided with this appliance must be used, and must be the same model as supplied with the unit.

The cylinder supply system must be arranged for vapor withdrawal.

Cylinders used with this unit must have a collar to protect the cylinder valve.

The use of an LP-cylinder stabilizer is recommended when the appliance is in use, to avoid tipping over the cylinder.

Replacement parts and a list of such parts are available from FMI Brands Inc. through the contact information provided on the last page of this Manual.

Please ensure that all adults and children which use or are near a unit in use are aware of the hazard of high-surface temperatures present on the unit during use and should use caution and stay away to avoid burns or clothing ignition.

Carefully supervise young children in the area of this appliance. Clothing or other flammable materials should not be hung from the appliance or placed on or near the appliance. Any guard or other protective device removed for servicing the appliance must be replaced prior to operating the appliance.

Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that control compartment, burners and circulating air passageways of the appliance be kept clean.